


UTA & UTP STAIRWAY TRIMS


NEW

BOX CONTENTS

- 20 pre-formed cleated aluminium (UTA) or welded PVCu (UTP) angles either 90° or 83° as ordered.
- 40 Tabs

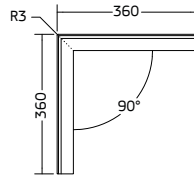



90° ANGLES FOR FLAT FRONT

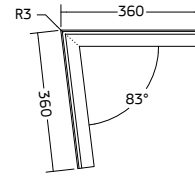

83° ANGLES FOR RAKE BACK

ASSEMBLY

- Establish floorcovering depth required and invert tab position as required.
- Slide the Tab into the groove on the reverse of the trim (position centrally and ensure Tab is the right way up for the required depth).
- Repeat for the vertical flange.

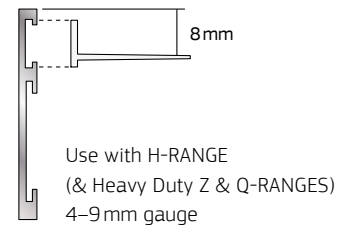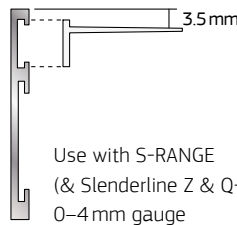

FITTING

- Fit trims before floorcoverings and Stair Nosings.
- Loosely position adjacent trims on the side of the steps and scribe the back edge of each angle to form a butt or mitred angle with its neighbour (FIG. 1).
- Once angles have been trimmed to fit, fix to side of steps using Q-FIX adhesive. The Tabs locate trims for correct depth (FIG. 2).

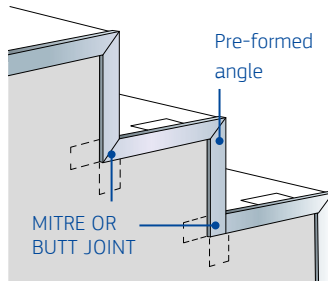


FIG. 1

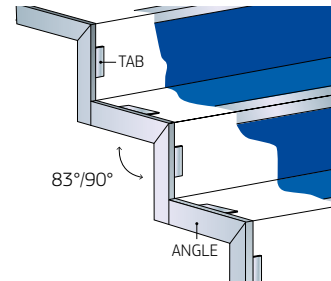


FIG. 2

PLEASE NOTE: Adhesive should not be applied over painted surfaces. Mechanical fixing is not advisable as drilling holes so close to the edge of the steps will cause concrete to fail.

USPs

- » Interchangeable fitting tabs.
- » Highly durable, anodised surface finish (UTA).
- » Strong cleated construction

COLOURS with LRVs - PVCu (UTP)

Black	Claret	Rustic	Peat	Dark Blue	Regency	Spruce	Granite	Flint	Light Grey	Polar Grey	Ivory	Yellow	White
6	6	10	10	11	11	11	11	15	26	49	51	67	81