


COVE FORMER & BEVEL STRIP FOR FLOOR COVERING TO WALL COVERING DETAIL

These two profiles are used in conjunction with each other to allow for the floor covering to be continued up the wall for a short distance and then be covered by the wall covering. This helps to create a clean finish in wet and sanitised areas. The cove former is installed at the junction of the floor and wall which provides a hidden radiused support for the floor covering as it is curved up the wall. The bevel strip then provides a tapered trim for the wall covering to ramp over the floor covering edge capping without the creation of a step or ridge.

Fitting

- i) **Bevel strip:** Prior to any wall covering being fitted, scribe a line on the wall where the floor covering is to finish. Apply solvent free contact adhesive to the back of the bevel strip and the wall where it is to be fitted, all in accordance with the recommendations of the adhesive manufacturer. Fit the bevel strip in place (tapered edge upwards as shown).
- ii) **Cove Former:** Apply solvent free contact adhesive to the back of the cove former and the wall/floor junction, all in accordance with the recommendations of the adhesive manufacturer. Fit the cove former in place.
- iii) Feed the floor covering over the radiused cove former and trim the edge to fit up to the edge of the bevel strip. Fit wall covering over the bevel/floor covering junction as shown and seal the wall covering edge as appropriate.

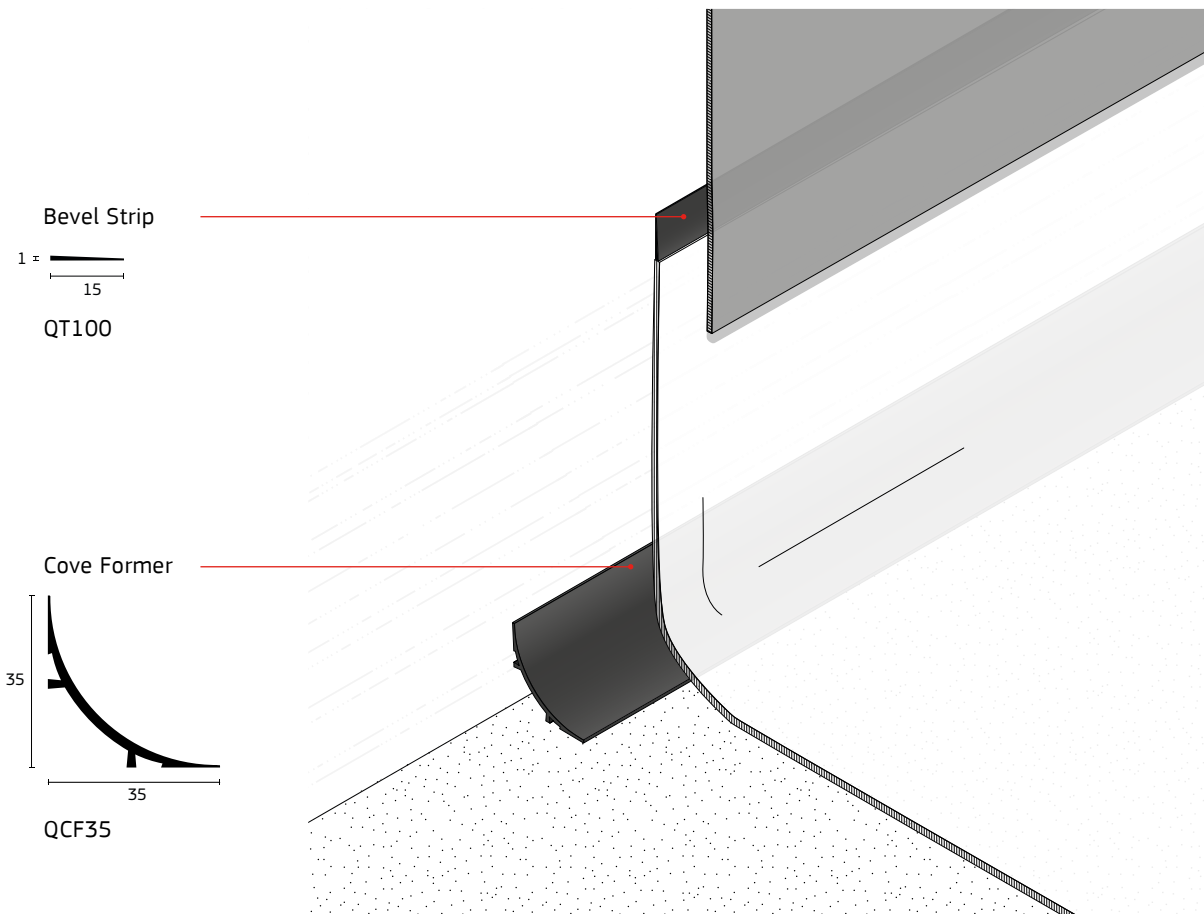

Product Code	Colours - std	Colours - available	Length
QCF35	Black ●	-	2m
QT100	Black ●	-	2m

IMAGES NOT TO SCALE

Colours shown here are for guide purposes only. For an exact match to your requirements, always request a sample.